Updating software



Scatter-loading: Choose the software txt file (the txt file starts with MT67..)



Click download

Scatter-loading !	114 F: VOURITELS
Download Only	-
Name	Papin Address

Warning: please don't choose another option in this field. We was been address Leave it as "download only ". If you choose another one, you may loose

your basic data and your phone will not work as normal

			W <u>e</u> lcor	me Form;	at <u>D</u> ownload	Readba	ack Memory <u>T</u> e	est				
4	-		1	Download	Stop							
			Down	Load-Agent	_Tool_v5	. 1516. 00	(Official)\SP_F	lash_To	ol_exe_Windows_v	5.1516.00\MTK_Al	.lInOne_DA.bin	🔁 Download Agen
			Scat	.ter-loadin	g File F:\OUKIT	EL所有手 [;]	机最新软件\OUKI	TEL_U2_'	V4.0_20151008\MT	6735M_Android_sc	atter.txt 💌	Scatter-loadi
MT	0705	1	Down	load Only	<u> </u>							
MI	6735	M		Name	Begin Addı	ress	End Addres	ss	Region		Location	
				preloader	0x000000000	000000	0x00000000000	01ecef	EMMC_BOOT_1	F:\OUKITEL所有	手机最新软件\C	UKITEL_U2_V4.0
				lk	0x000000001	c80000	0x000000001c	cc681f	EMMC_USER	F:\OUKITEL所有	手机最新软件\C	UKITEL_U2_V4.0
				boot	0x000000001	d80000	0x0000000023	3f87ff	EMMC_USER	F:\OUKITEL所有	手机最新软件\C	UKITEL_U2_V4.0
				recovery	0x000000002	d80000	0x0000000034	4a27ff	EMMC_USER	F:\OUKITEL所有	手机最新软件\C	UKITEL_U2_V4.0
				logo	0x00000003	d80000	0x0000000003e	164e1	EMMC_USER	F:\OUKITEL所有	手机最新软件\C	UKITEL_U2_V4.0
				secro	0x000000005	200000	0x0000000052	220fff	EMMC_USER	F:\OUKITEL所有	手机最新软件\C	UKITEL_U2_V4.0
				tee1	0x000000006	000000	0x00000000000	00abff	EMMC_USER	F:\OUKITEL所有	手机最新软件\C	UKITEL_U2_V4.0
				tee2	0x00000006	500000	0x0000000065	50abff	EMMC_USER	F:\OUKITEL所有	手机最新软件\C	UKITEL_U2_V4.0
				system	0x00000000b	000000	0x0000000525	7a8d3	EMMC_USER	F:\OUKITEL所有	手机最新软件\C	UKITEL_U2_V4.0
				cache	0x00000006b	000000	0x00000006b8	30012f	EMMC_USER	F:\OUKITEL所有	手机最新软件\C	UKITEL_U2_V4.0
			V	userdata	0x000000084	000000	0x000000085a	8624f	EMMC_USER	F:\OUKITEL所有	手机最新软件\C	UKITEL U2 V4.0

Connect phone(phone in power off state), it will start updating automatically

	Walass	Rown	+ Dowpload P	aadhaalt	Memory Test						
	n <u>e</u> rcon			eauback	memory resc						
	I	lownload	Stop								
	DownJ	load-Agent ter-loadin;	ad-Agent								
IT6735M	Down	load Only	T								
		Name	Begin Address		End Address	Region	Location				
		preloader	0x000000000000000000000000000000000000	00x0	0000000000 <mark>1</mark> ecef	EMMC_BOOT_1	F:\OUKITEL所有手机最新软件\OUKITEL_U2_V4.0				
		lic -	0x0000000001c800	000 0x0	000000001cc681f	EMMC_USER	Fi\OUKITEL所有手机最新软件\OUKITEL_U2_V4.0				
	\checkmark	boot	0x000000001d80	0x0 0x0	0000000023f87ff	EMMC_USER	F:\OUKITEL所有手机最新软件\OUKITEL_U2_V4.0				
	V	recovery	0x000000002380	000 0.00	000000034a27ff	EMMC_USER	F\\OUKITEL所有手机最新软件\OUKITEL_U2_V4.0				
a 🛑 🍤	\checkmark	logo	0x000000003d80	00x0 0x00	00000003e164e1	EMMC_USER	F:\OUKITEL所有手机最新软件\OUKITEL_U2_V4.0				
		secro	0x00000060052000	900 0x0	0000000322011	EMMC_USER	FLOUKITEL所有手机量新软件\OUKITEL_U2_V4.0				
		tee1	0x00000000060000	00x0 000	00000000600abff	EMMC_USER	F:\OUKITEL所有手机最新软件\OUKITEL_U2_V4.0				
p Info		tee2	0x00000000065000	300 0.400	00000000650abtt	EMMIC_USER	F\/OUKITEL所有手机最新软件\/OUKITEL_U2_V4.0				
Tame: [6735M SOO		system	0x000000000000000000000000000000000000	00x00	000000525/a8d3	EMMC_USER	H:\OUKITEL所有手机最新软件\OUKITEL_U2_V4.0				
Version: Dx0000ca00		us or data	0-0000000840000		000000005-06046	EMMC_USER					
E FVT 268		userdata	0x0000000840000		00000085880241	EIVIIVIC_USER	F:\00K1EL//有子//减加软件\00K1EL_02_V4.0				
DIN T DIN											
n RAM Type: DRAM											
RAM Size: Dx40000000											

Succeed!

Smart Phone Flash Tool(Runtime T	race Mode)										
<u>File Options W</u> indow <u>H</u> elp											
	W <u>e</u> lcome Forma	<u>a</u> t <u>D</u> ownload	Readback	Memory <u>T</u> est							
вм	Download	© Stop									
	Download-Agent _Tool_v5.1516.00(Official)\SP_Flash_Tool_exe_Windows_v5.1516.00\MTK_AllInOne_DA.bin										
MTG79EN	Scatter-loadin; Download Only	g File F:\OUKITEL	,所有于机载制	新软件\OUKITEL_U	2_V4.0_20151008\M	T6735M_Android_scatter.txt _▼	Scatter-loading				
MI073DM	✓ Name	Begin A 📃 I	Download (0k	jion	Location					
	🔽 preloader	0x0000000			BOOT_1	F:\OUKITEL所有手机最新软件\OU	JKITEL_U2_V4.0				
	🔽 lk	0x000000			USER	F:\OUKITEL所有手机最新软件\OU	JKITEL_U2_V4.0				
	🔽 boot	0x0000000			USER	F:\OUKITEL所有手机最新软件\OU	JKITEL_U2_V4.0				
	✓ recovery	0x0000000			USER	F:\OUKITEL所有手机最新软件\OU	JKITEL_U2_V4.0				
	🗷 logo	0x0000000			USER	F:\OUKITEL所有手机最新软件\OU	JKITEL_U2_V4.0				
	✓ secro	0x000000			USER	F:\OUKITEL所有手机最新软件\OU	JKITEL_U2_V4.0				
	🔽 tee1	0x0000000			USER	F:\OUKITEL所有手机最新软件\OU	JKITEL_U2_V4.0				
🔄 Chip Info	✓ tee2	0x00000000650	00x00 00000	0000000650abf	f EMMC_USER	F:\OUKITEL所有手机最新软件\OU	JKITEL_U2_V4.0				
	📝 system	0x0000000b00	00000 0x00	0000005257a8d	3 EMMC_USER	F:\OUKITEL所有手机最新软件\OU	JKITEL_U2_V4.0				
Chip Name: [6735M_S00	🔽 cache	0x00000006b00	0000 0x00	0000006680012	f EMMC_USER	F:\OUKITEL所有手机最新软件\OU	JKITEL_U2_V4.0				
Chip Version: Dx0000ca00	📝 userdata	0x00000008400	00x0 0x00	00000085a8624	f EMMC_USER	F:\OUKITEL所有手机最新软件\OU	JKITEL_U2_V4.0				
Ext Clock: EXT_26M											
Extern RAM Type: DRAM											
Extern RAM Size: 0x40000000											
				Down	nload Flash 100%						
🐺 EMMC Flash	12.51M/s	1.16G		EMMC High :	Speed 1:39) MediaTek PreLoader USB VO	COM (Android) (COM3)				