

MouseSpirit instructions


一、Open the software




MouseSpirit (EN). exe
MouseSpirit Micr...



二、Chose PAN3205DB from Sensor.

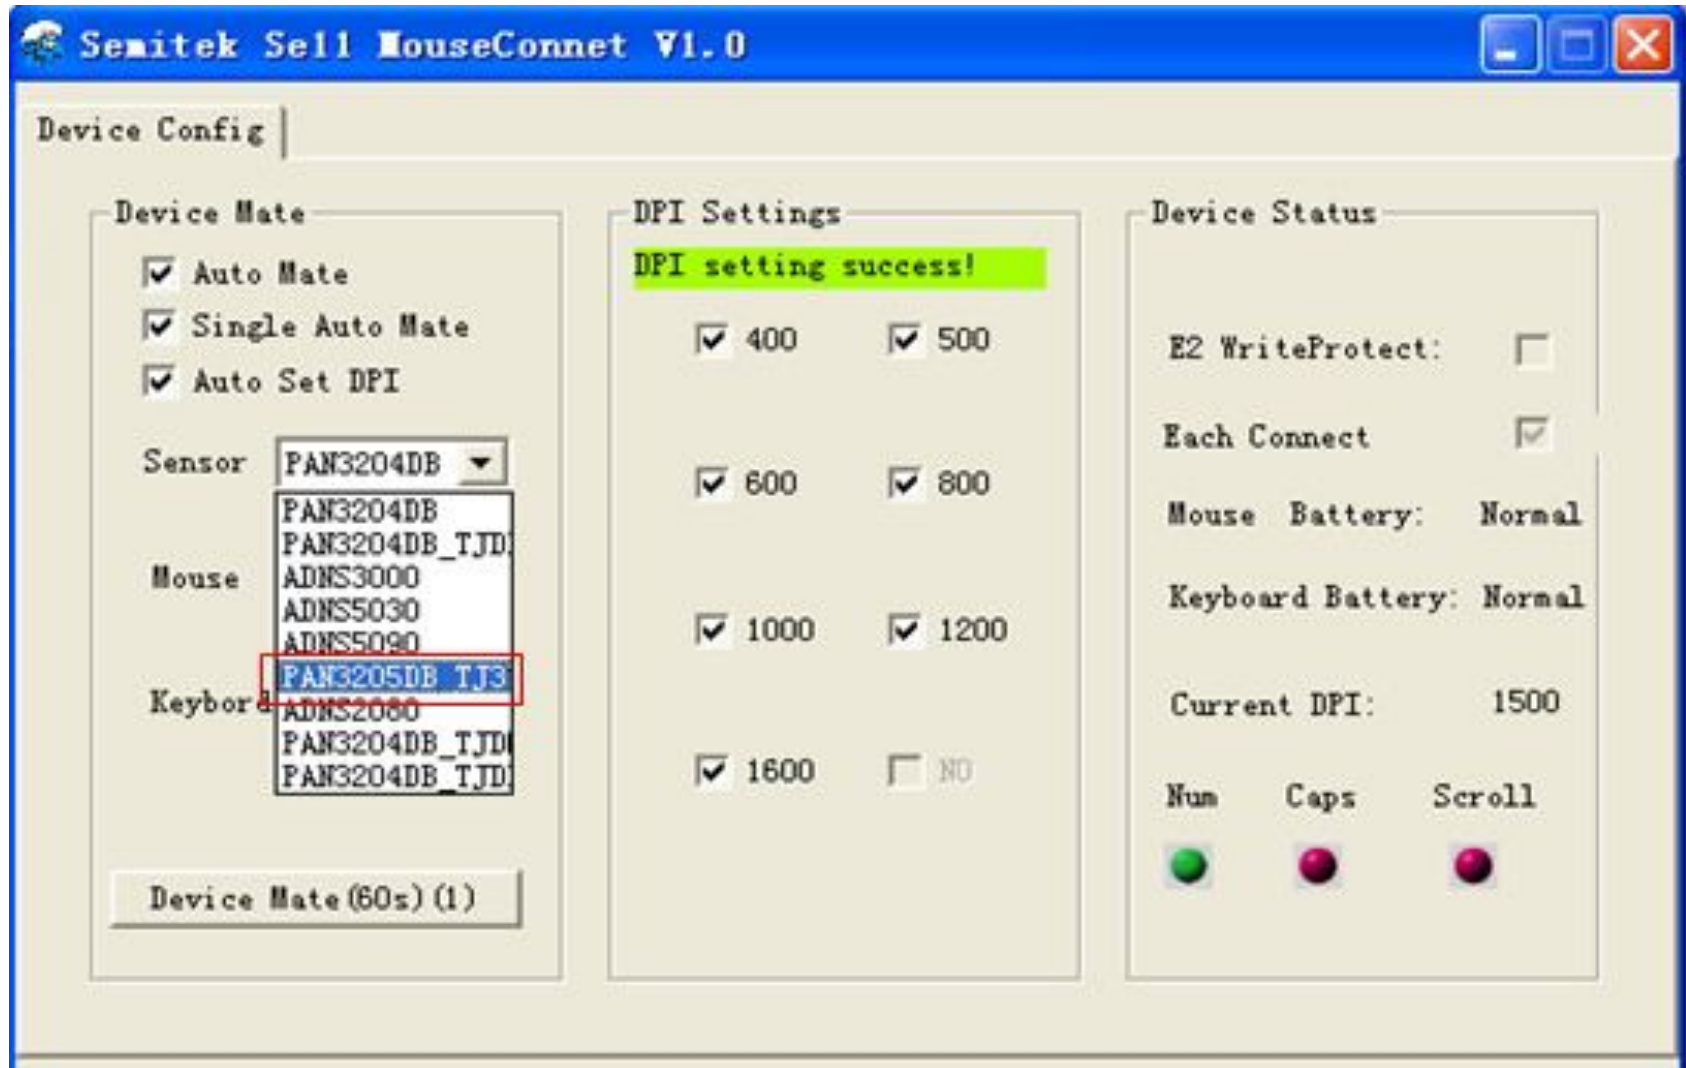

三、Plug Dongle to USB port。

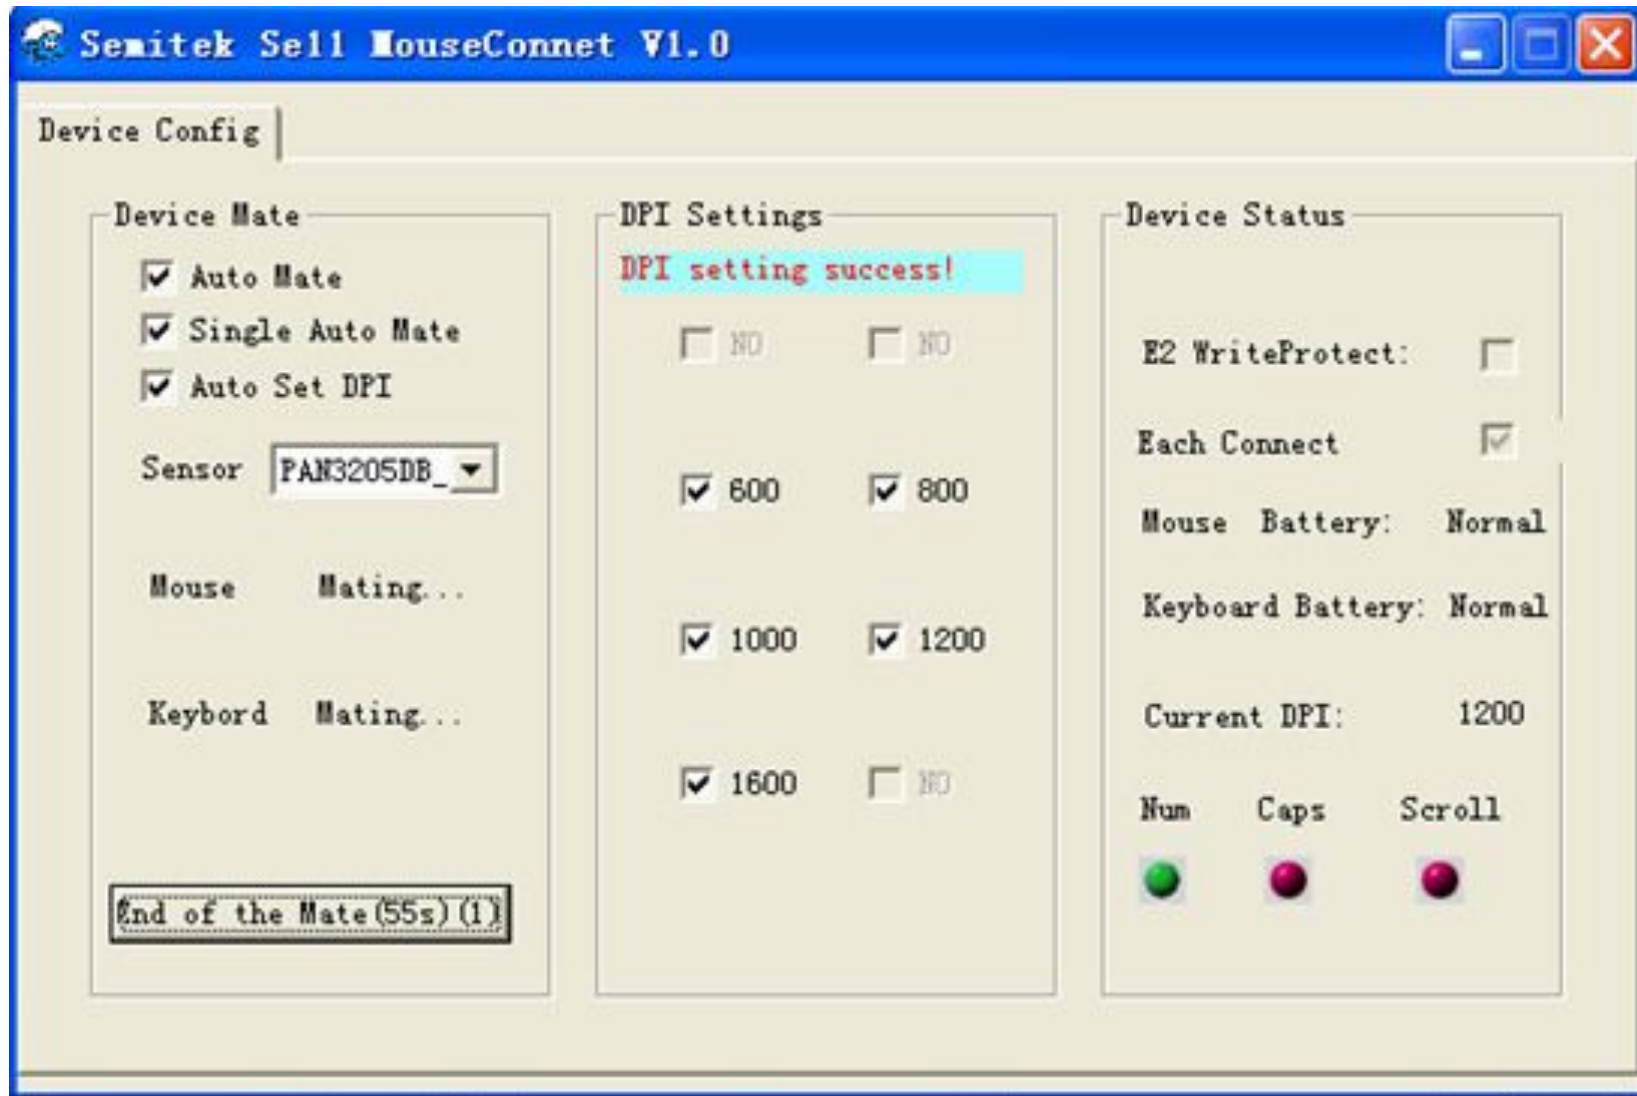

四、Click

Device Mate (60s) (1)

Semitek Sell MouseConnet V1.0

Device Config

Device Mate

☒ Auto Mate

☒ Single Auto Mate

☒ Auto Set DPI

Sensor

Mouse Failed!

Keyboard Failed!

Device Mate (60s) (1)

DPI Settings

DPI setting success!

☐ NO ☐ NO

☒ 600 ☒ 800

☒ 1000 ☒ 1200

☒ 1600 ☐ NO

Device Status

E2 WriteProtect: ☐




Each Connect ☒

Mouse Battery: Normal


Keyboard Battery: Normal

Current DPI: 1200



Num Caps Scroll



五、Access to working state

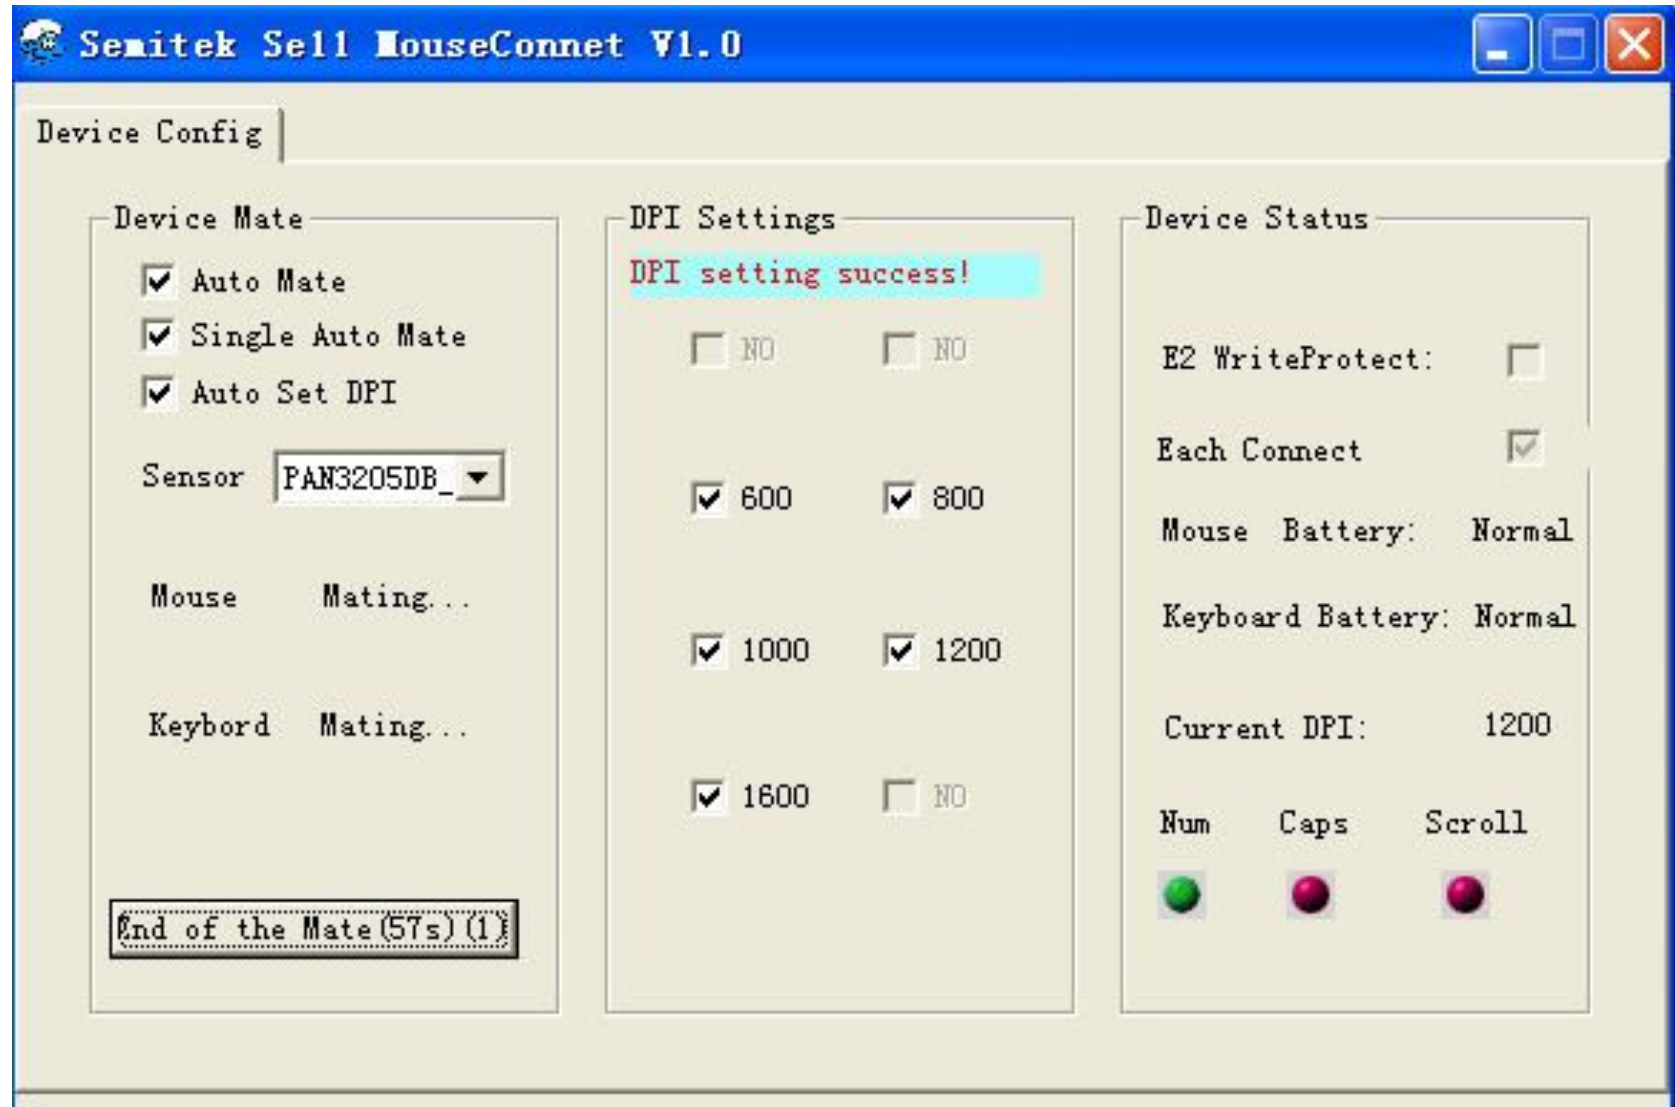

六、Press the middle key and right key together。

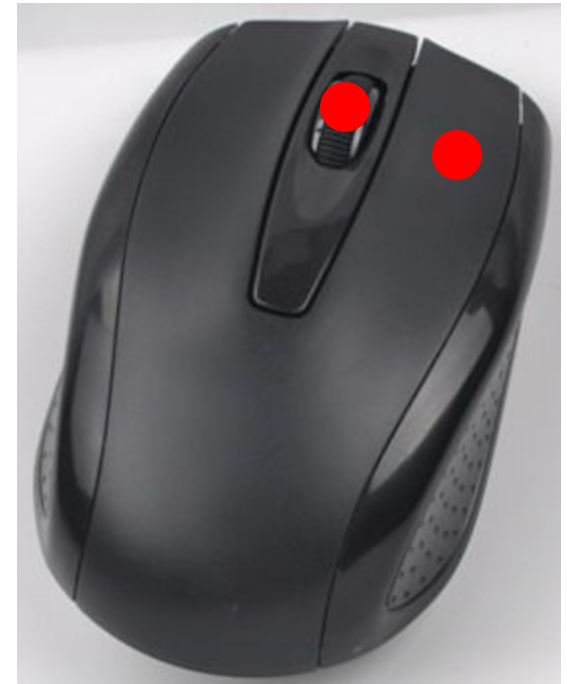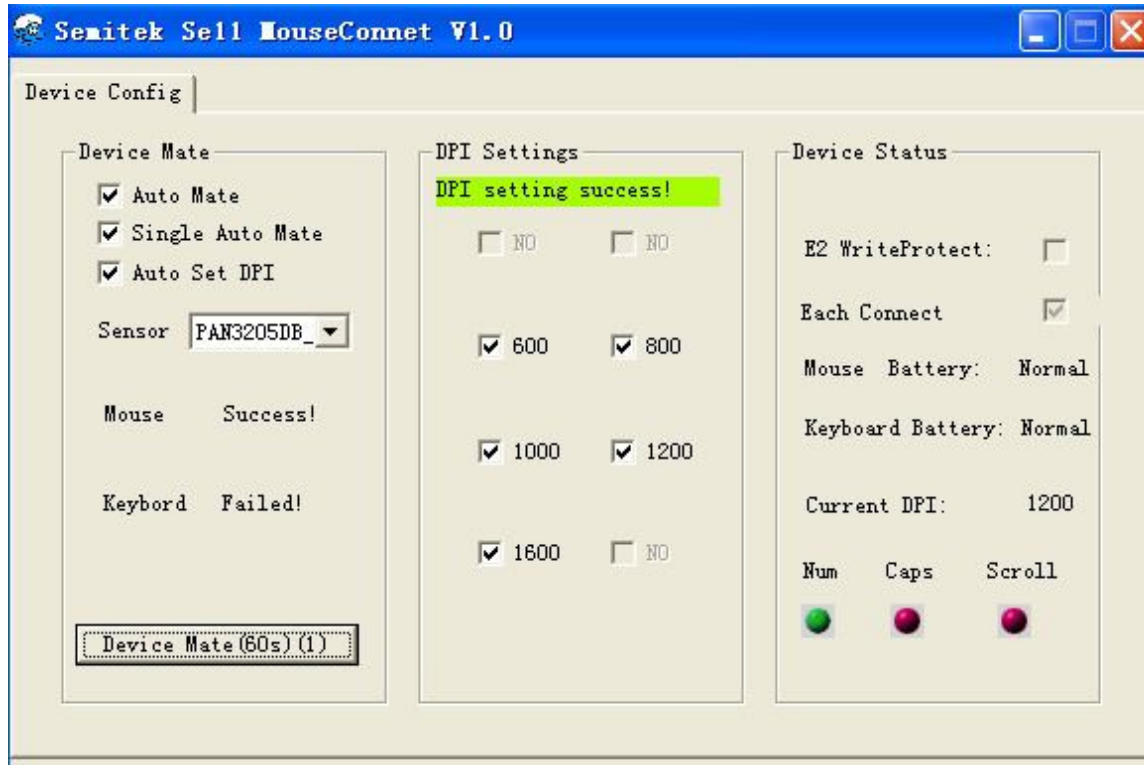

七、 Press the ESC key and Q key together.

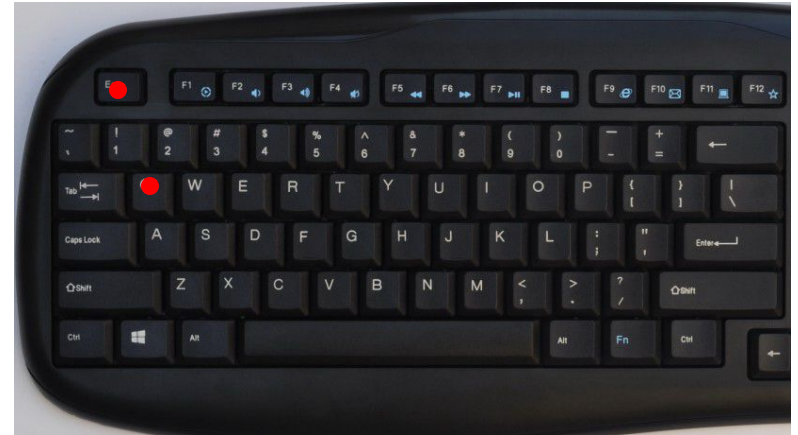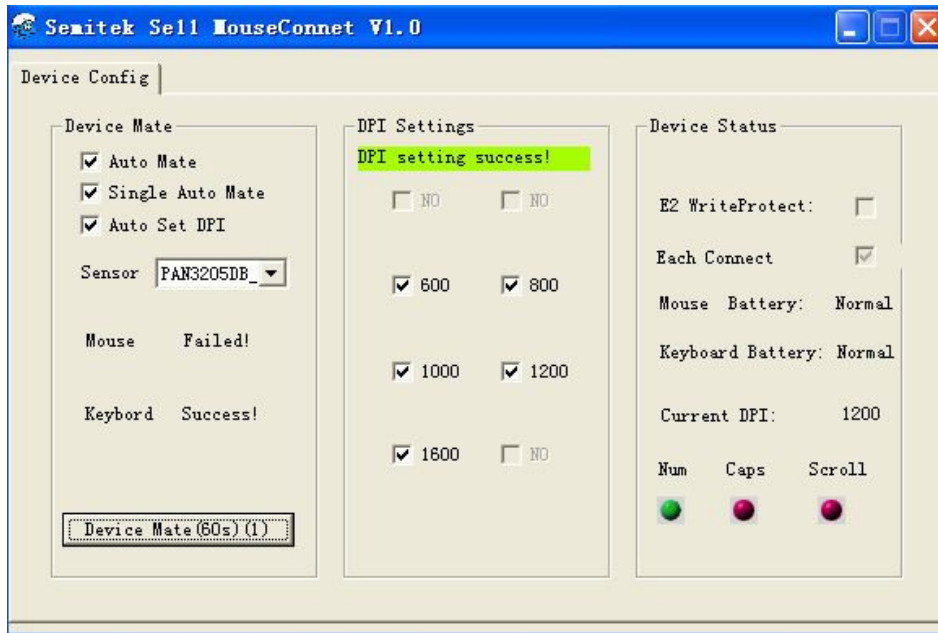

Keyboard and mouse can function well.